D-series Flow Monitor

Manual





Contents

D-series Flow Monitor	1
Manual	1
Contents	2
About this Manual	4
Proprietary Rights	4
Distributors	4
Customer Service	4
1 General Information	5
1.1 Description	5
1.2 Overview Control Unit	
1.3 Overview Pipe Section	6
1.4 Pipe Dimensions	7
1.5 PED Certification	7
1.6 EMC	7
1.7 Type Plate	8
1.8 Specifications	9
2 Installation	
2.1 Unpacking	10
2.2 Preparations	10
2.3 Installation of the Flow Monitor	11
2.4 Installation and Changing of the Control Unit	14
2.5 Separate Mounting of the Control Unit and Pipe Section	15
2.5.1 Separate Mounting - Installation	16
2.6 Electrical Installation	17
2.6.1 HART Protocol Specification	19
2.6.3 HART Identifying Device	19
2.6.2 Zero based / Non-Zero based Calibration	20
3 Operation	
3.1 Display Settings	21
3.1.1 Overview	21
3.1.2 Language	22
3.1.3 Settings	22



3.1.4 Options	25
3.1.5 Simulation	27
3.1.6 Info	27
3.1.7 Factory Default	28
3.1.8 Calibrate	29
3.2 Change of Flow Direction	31
3.3 Change of Flow Range	31
4 Differential Pressure Measurement	
4.1 The Differential Pressure Principle	34
4.2 Pressure Drop	34
5 Trouble Shooting	
5.1 Inaccurate Flow Prediction	36
5.2 Spares	36
6 Spare Parts	
6.1 BOM Drawing D-GL/FA	37
6.2 BOM Drawing D-GSS/FSS	39
7 Weight and dimensions	
8 Measuring Ranges	



About this Manual

- This manual relates to the D-series Flow Monitor.
- Note that the latest version of this manual is always available as a PDF file on our web site <u>www.eletta.com</u>

• On our web site you also find other interesting information such as leaflets, newsletters and application reports.

Proprietary Rights

This manual contains confidential technical data, including trade secrets and proprietary information, that are the property of Eletta Flow AB, Sweden.

Any changes or alterations to downloaded or printed Eletta original documentation such as manuals, drawings, leaflets, newsletters, etc. are not permitted without a written permission from Eletta Flow AB, Sweden.

These data are only disclosed to you under permission of limited use within your company. Use for manufacturing or processing is not permitted.

Any other use of data and information is strictly prohibited without prior written permission from Eletta Flow AB, Sweden.

Distributors

Eletta has appointed a number of distributors all over the world. You will find more information about your closest distributor at our web site <u>www.eletta.com</u>, or by contacting our Customer Service Center.

Customer Service

Our Customer Service Center is available during normal office hours 8.00 - 16.30 C.E.T., (8 am - 4.30 pm Central European Time).

Phone +46 8 603 07 70 Switchboard +46 8 603 07 80 Orders and Inquires Postal Mail Eletta Flow AB P.O. Box 5084

E-mail info@eletta.com Web www.eletta.com



1 General Information

1.1 Description

The D-series Eletta Flow Monitor are used to measure and control flows of liquids and gases in threaded pipes with sizes DN15-DN40 and flange fitted pipe sizes DN15 to DN500.

The Eletta Flow Monitor is based on the proven and dependable differential pressure principle, using interchangeable orifice plates for different measuring ranges. The Flow Monitors are working with two different differential pressure ranges, i.e. 500-2000 mmH2O (49-196 mbar) for the D2 and 220-5500 mmH2O (22-539 mbar) for the D5, depending on the desired and ordered flow range and the same goes for our models; V1 and V15, S2 and S25 and R2 and R5. Due to the working principle of the instrument, it is of utmost importance that the installation instructions are followed carefully in order to get the proper function of the instrument.

The Instrument mainly consists of two parts i.e. the Pipe Section and the Control Unit. The Pipe Section is the part that is to be mounted in the process pipe and the Control Unit is mounted directly (standard) or remote on/to the Pipe Section.

D-series is available with four different types of pipes; Threaded GL/GSS and FA/FSS for flanged fitting.







D-FA



D-GSS




D-FSS



1.2 Overview Control Unit

The Control Unit mainly contains the diaphragm housing and two circuit boards (the display circuit board and the power circuit board). The mechanical movement on the diaphragm lever created by the differential pressure in the pipe is acting on the rubber diaphragm in the same way as our other mechanical Flow Monitors. The lever connected to the diaphragm is acting on a linear potentiometer placed on the power circuit board in the Control Unit. As our Monitors have a linear function between the differential pressure and the flow, the circuit board will give you a linear flow output of 4-20 mA, HART protocol, pulse or 200-1000 Hz frequency. The difference to our mechanical V and S-series is that in the D-series there is no mechanical linkage acting on micro switches, as the unit lacks

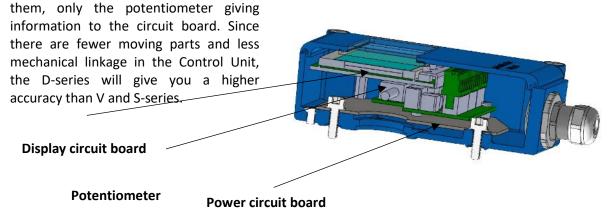


In order to get the unit to work properly with good accuracy, it is very important that the unit is installed correctly according to the installation instruction, see chapter 2 "Installation".

1.3 Overview Pipe Section

The Pipe Section is assembled in-line with the process pipe and the Control Unit is fitted on top of the Pipe Section. It is also possible, for example when measuring a too hot media, to install the Control Unit separated (using either steel pipes or tubes) from the Pipe Section, see chapter 2.5.

There are four different types of Pipe Sections; GL, GSS, FA and FSS. All Pipe Sections except FSS contains an exchangeable Orifice Plate. The FSS Pipe Section do not contain an exchangeable Orifice Plate since the shaft and orifice makes one integrated unit.

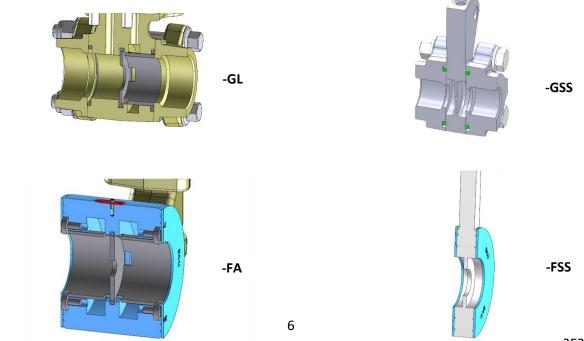



1.4 Pipe Dimensions

The Pipe Sections are available in various dimensions and materials to fit different requirements of various applications. Following tables provide a summary of our different materials and fittings.

Threaded connections		
Pipe material	Туре	Available dimensions
Dezincified Brass,	GL15 - GL40	DN15 - DN40, ½ - 1½" BSP
CW602N/EN12420		DN15 - DN40, ½ - 1½" NPT
Stainless Steel	GSS15 - GSS25	DN15 - DN25, ½ - 1" BSP
1.4470/EN10213		DN15 - DN25, ½ - 1" NPT

Flange connections		
Pipe material	Туре	Available dimensions
Bronze	FA15 - FA32	DN15 - DN32, DIN PN16
CC491K/493K-GC/GZ/1982		DN15 - DN32, ANSI 150 lbs
Cast Iron, paint coated	FA40 - FA400	DN40 - DN400, DIN PN16
EN-GJL-250/EN1561		DN40 - DN100, ANSI 150 lbs
		DN125 - DN200, Suitable ANSI 150 lbs
		DN250 - DN300, ANSI 150 lbs
Stainless Steel	FSS15 - FSS500	DN15 - DN500, DIN PN16
EN1.4435/EN1.4401/EN1.4404		DN15 - DN500, ANSI 150 lbs
Stainless Steel	FSS15 - FSS500	DN15 - DN500, DIN PN16
254SMO/EN1.4547 *		DN15 - DN500, ANSI 150 lbs
Bronze	FA40 - FA400	DN40 - DN400, DIN PN16
CC491K/493K-GC/GZ/1982 *		DN50 - DN100, ANSI 150lbs
		DN125 - DN200, Suitable ANSI 150 lbs
		DN250 - DN300, ANSI 150 lbs

* Optional material for given types and dimensions.

1.5 PED Certification

Eletta Flow AB comply with the Pressure Equipment Directive 2014/68/EU.

Assessed with respect to Annex I, Chapter 3 in the Pressure Equipment Directive and in relation to Module C2.

Certification performed by Inspecta AB, Notified body No. 0409. PED Declaration of Conformity will be sent to you upon request and are also available on <u>www.eletta.com</u>

1.6 EMC

D-series Flow Monitor comply with the EMC directive 2004/108/EC through the following harmonized standards:

- EN 61 000 - 6 - 3:2007 Generic Emission - Residential, commercial and light industry.

- EN 61 000 - 6 - 2:2005 Generic Immunity - Industry.




1.7 Type Plate

Each Eletta Flow Monitor wear a Type Plate with technical data and specifications for the specific Flow Monitor. The Type Plate is located on the top of the Control Unit shown as below.

Always check that the information on the Type Plate corresponds to what you have ordered.

The Type Plate states the following:

- **Type:** Model type of the Flow Monitor. For example: D5-GL15.
- **Range:** Flow range of which the Flow Monitor has been manufactured. i.e. what the Orifice Bore has been calculated for.
- Liquid: The media of which the Flow Monitor has been manufactured. For example: Water, Oil, Air, etc.
- **Model:** The article number of the Flow Monitor.
- No: The serial number of the Flow Monitor.
- **Temp:** The operating temperature range allowed for the Flow Monitor.
- **Max Pressure:** The maximum operating pressure allowed for the Flow Monitor.
- **Protection Class:** IP-classification of the Flow Monitor (International Protection Marking).
- **Std:** Pipe standard of the Pipe Section. For example: DIN PN16/ANSI, BSP/NTP.
- CE marking and year of manufacturing.

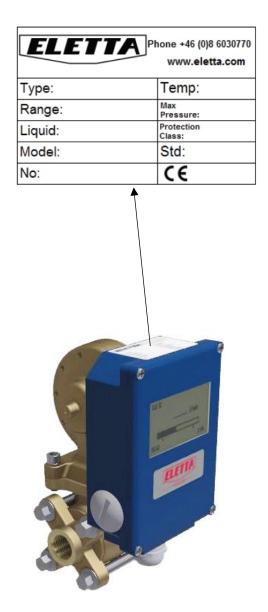



1.8 Specifications

Flow range	Liquids: 0,4-25 000 l/min, depending on pipe size	
riow range	See chapter 8 "Measuring Ranges" for a table of our standard flow	
	ranges for water and oil	
	Gases: will be calculated according to application	
Flow measuring range	D2-model: TD of 1:2 (50-100% Flow Range)	
(Turn Down)	D5-model: TD of 1:5 (20-100% Flow Range)	
Accuracy	±2% F.S. (Full scale)	
Accuracy	Accuracy is stated as per reference and under ideal conditions i.e.	
	straight runs, temperature, pressure, viscosity and density. It is	
	recommended that you always chose the flow range of the Flow	
	Monitor so that the normal process flow is in the middle of the	
	Monitor Flow Range. For example: If you have a flow of 110 l/min	
	maximum and the normal flow is at 90 l/min, choose the Eletta Flow	
	Monitor D2 with a flow range of 60 - 120 l/min. This will give you	
	the highest accuracy since your flow is in the middle of the Monitor	
	Flow Range and will also give you a lower pressure loss	
Pressure	Pressure class: PN16 / ANSI 150 lbs	
	Max static pressure: 16 bar (232 PSI)	
	Min static pressure: Line pressure of approximately 1 bar (14 PSI) is	
	required for proper operation	
Protection class	IP65 (NEMA4)	
Temperature ranges	Control unit	
	Operating temp: -10 to 65°C (14 to 149°F)	
	Higher process temperatures are achievable by remote installation	
	of the Control unit, see chapter 2.5 "Separate Mounting"	
	Pipe section	
	GL and FA: -10 to 120°C (14 to 248°F)	
	FSS and FSS: -10 to 250°C (14 to 482°F)	
Power supply	24 VDC, ±1.5 VDC	
Output	4-20 mA, HART protocol, pulse or 200-1000 Hz frequency (AO	
	update rate 20 ms)	
	See chapter 2.6 "Electrical Installation"	
Connection cable	Shielded twisted pair, min. 0,2 mm ² (0,0031 inch ²)	
Current consumption	Max 50 mA	
Alarm relays	Two independent relays, user settable over the whole flow range	
	Max: 50 V AC/DC	
	Min: 1 mA, 5 VDC	
	Max switching capacity: 30 W	
Materials: Diaphragm, O-		
rings and sealings	FPM (Fluorinated rubber), standard on GSS/FSS, optional on GL/FA	
- •	EPDM (Ethylene Propylene Diene), optional on all models	
Materials: Spacers	GL pipes: Polyamide plastic (-10 to 120°C /14 to 248°F)	
	FA pipes: DN15-100 Polyamide plastic (-10 to 120°C /14 to 248°F)	
	DN125 – 400 Stainless steel EN 1.4404 (ASTM 316L)	



2 Installation

2.1 Unpacking

Before installation, we kindly ask you to perform the following steps:

1) Check that there are no external damages to the outer packaging. If there are damages, check to see if the Flow Monitor has been damaged. If there is a transportation damage on the Flow Monitor, please contact your forwarder.

2) Check that the delivered parts correspond to the Packing list. Also check that the information on the Type Plate corresponds to what you have ordered. The Type Plate is located on top of the Control Unit, see chapter 1.7 "Type Plate".

The packaging material is made of recycled environmental friendly material, and we kindly ask you to deal with the material in a way that will have as little impact on the environment as possible.

2.2 Preparations

Before installation, we kindly ask you to perform the following steps:

1) Eletta recommends that you choose a correct position for installation of the Flow Monitor in your pipe system. The following table serves as a guideline.

Process Media	Correct installation	
Liquid	Low level position of the system	
Gas	High level position of the system	

2) Check that the planned flow direction in your pipe system corresponds to the flow direction of the Flow Monitor. The flow direction is indicated by a red arrow that is mounted on the GL/FA Pipe Section. On the GSS/FSS version there will be an engraved arrow on the Pipe Section. If there is a mismatch of the flow direction, we refer to chapter 3.2 "Change of Flow Direction" for instructions on how to adjust the internal flow direction selector (GL/FA) to match the desired flow direction. It is not possible to change the flow direction on the GSS/FSS version without ordering a new Pipe Section, this is because the flow direction channels are fixed for the specific flow direction and cannot be reversed.






2.3 Installation of the Flow Monitor


Note! Before starting the installation, please make sure that the piping is not pressurized from flow of liquid or gas!

The Flow Monitor can be installed vertically, horizontally or angular. We do not recommend to install the Flow Monitor upside down, this is to prevent particles in the fluid to collect in the diaphragm housing. Please use a filter in the pipe line if you suspect the fluid to contain particles. Below you can see the display orientations available, the display orientation will be pre-configured according to the orientation code (A/R, B/L, C/R, etc.) that was specified upon ordering the Flow Monitor.

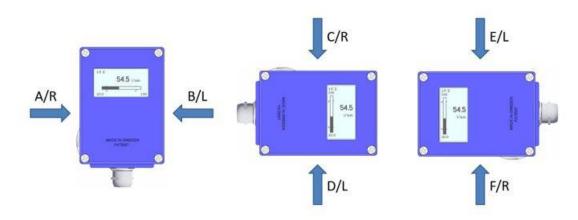

It is very important that the Flow Monitor is mounted in the correct flow direction as the function of the Flow Monitor otherwise will be prevented. The flow direction arrow that is located on the Pipe Section denotes the flow direction which needs to correspond with the flow direction in the system.

The piping shall be rigid and vibration free. Hoses connected directly into the Flow Monitor should be avoided as much as possible. On the rear side of the GL Pipe Section there is a threaded M6 hole which can be used to secure the Flow Monitor on a wall or similar by using an angle bracket. For FA and FSS Pipe Sections you can support the Flow Monitor by using rigid brackets. We recommend installing the brackets both downstream and upstream to avoid unnecessary stress in the installation area.

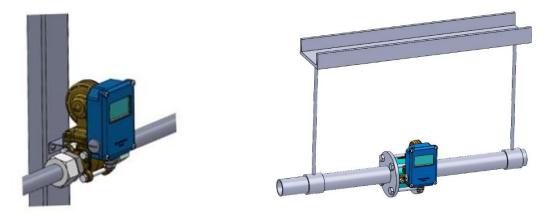


If your piping system still suffers from vibrations, we recommend a separate mounting of the Pipe Section and Control Unit. See chapter 2.5.




Installation of pipes with threaded flanges

In the case that the inner diameter of your pipes, including fittings, does not correspond to the inside diameter of our pipes, inaccuracy may occur. Fittings with an inside diameter that is smaller than the inside diameter of the Eletta Pipe Section may create a media jet stream of the media, this will result in a too low differential pressure and thereby causing a measurement error. See chapter 7 "Dimension Tables" for inside and outside diameters of our different pipes.

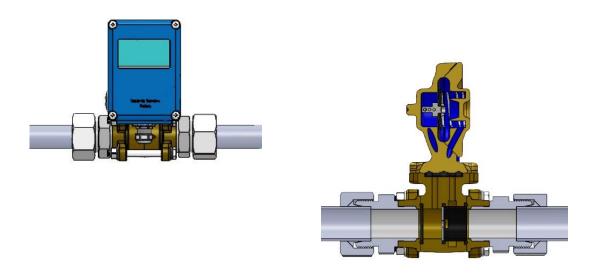

Installation of pipes for flanged fittings

FA and FSS-versions must be aligned with the counter flanges and should not be exposed to stress related to unevenly tightened bolts. The flanged models are delivered with two fiber gaskets which we recommend that you use since they are dimensioned according to our pipe dimensions. Please ensure that the gaskets are properly aligned and do not obstruct the flow.

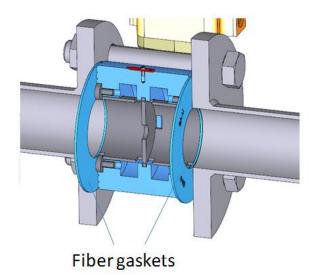




Straight runs

To obtain maximum accuracy, make sure that the system pipe has sufficiently long straight runs before and after the installed Flow Monitor.

We recommend the straight runs to be at least 10-15 times the pipe diameter upstream and 5 times the pipe diameter downstream.

Also make sure that there are no valves, bends or diameter changes, this is to avoid flow disturbances which might cause an inaccurate reading of the flow.

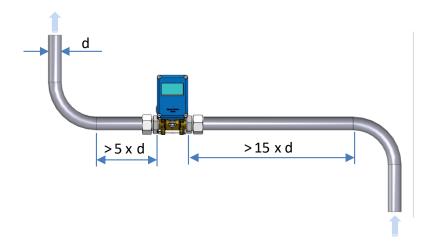

Note!

In applications where maximum accuracy is not necessary, the lengths of the runs can be reduced. Note that it is practically impossible to predict where and when a flow gets stable after a disturbance. Therefore, the recommendation above serves only as a guideline, i.e. a method that has proven to secure the measurement accuracy. If shorter runs are used, Eletta neither can guarantee the specified maximum accuracy, nor predict the flow in your specific application.




2.4 Installation and Changing of the Control Unit

All Eletta Flow Monitors are designed to achieve a modular and versatile instrument. The modular system allows you to upgrade, rebuild or add other features to your already installed Flow Monitor.

For example: if you would like to upgrade a V or S-series with mechanical micro switches to a Dseries including user settable relay switches and a mA, pulse or frequency output this is easily done. Simply order a new D-series Control Unit to replace your old Control Unit and keep your existing Pipe Section and orifice.

You will get the Control Unit with the diaphragm housing included. Make sure you order the right material in the diaphragm housing and the soft rubber parts (diaphragm, O-rings and lever) and you will get the Control Unit already tested and calibrated and ready to fit onto the Pipe Section, without any on-site adjustments or re-calibration. All Eletta DP Flow Monitors work with the same differential pressure within their specific range, see chapter 4.2 "Pressure Drop".

As an option we also have a manifold with shut-off valves for versions GL/FA and GSS/FSS. The manifold is installed between the Control Unit and the Pipe Section, this enables you to dismount the Control Unit from the Pipe Section during full operation. If you do not have a manifold installed, you need to shut off your system and make sure that the piping is not pressurized before changing the Control Unit.

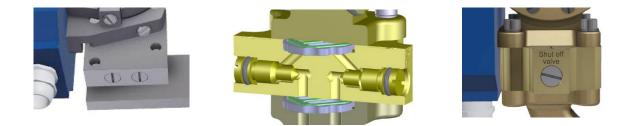

Note!

Before you start, make sure that the piping system is not pressurized or shut the shut-off valves if you have a manifold installed. Turn the electric power supply off and then disconnect the cables from the electric terminal.

On GL/FA Pipe Section

Loosen the four (4) hexagon screws that hold the diaphragm housing to the Pipe Section. **Do not remove the blue housing from the diaphragm housing at any time!** Replace the flow direction selector if damaged (available as a spare part). Install the new Control Unit and tighten the four (4) hexagon screws firmly again.

On GSS/FSS Pipe Section

Loosen the two (2) hexagon screws that hold the diaphragm housing to the Pipe Section. **Do not remove the blue housing from the diaphragm housing at any time!** Replace the O-rings if damaged (Spares included with your new Control Unit). Install the new Control Unit and tighten the two (2) screws firmly again.



2.5 Separate Mounting of the Control Unit and Pipe Section

Sometimes, the pipe Section and the Control Unit need to be separately located from each other. The reasons could be lack of space, high system media temperature or vibrations. The following section explains our Separate Mounting kit.


The orifice plate creates two pressures, one on each side of the plate. These pressures are distributed to the two pressure sensors in the Control Unit through channels in the pressure plate and the pipe section. When installing the Pipe Section and the Control Unit separately, these channels are extended by using two plastic hoses. These hoses are fitted between the Pipe Section and the Control Unit using two adapters.



As a standard, two 1,75 m (5.74 feet) PA plastic hoses are delivered with the Separate Mounting kit. The diameter is 6 mm (0,23 inch) and suitable for a maximum temperature of 90 °C (194 °F) and a maximum pressure of 10 bar (145 PSI).

The plastic hoses shall not be used for temperatures higher than 90 °C (194 °F) or pressures higher than 10 bar (145 PSI). If your process temperature or pressure exceeds these levels, we recommend you to use copper or stainless steel pipes. Such pipes are not included with the product. Choose material with respect to the type of liquid or gas in your system. If you are using a chemical reactive media, check with your tubing supplier which is the most suitable material to use for your application.

For a Separate Mounting you need two different adapters. One that is installed on the Pipe Section and one for the Control Unit. The Control Unit adapter has valves for discharging entrapped air in the tubes. There is also an angle bracket included for wall fitting.

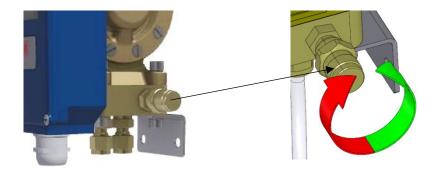




2.5.1 Separate Mounting - Installation

We recommend installing the Pipe Section and the Control Unit as close to each other as practically possible. This will facilitate future trouble-shooting and on-site calibration.


Assemble the Control Unit adapter to the Control Unit (see chapter 2.4 on how to separate Control Unit and Pipe Section). If Separate Mounting is ordered together with the Control Unit and Pipe Section, the adapter will be assembled from factory.

Find a suitable place for installing the Control Unit. We recommend that the Control Unit is installed where it is easily accessed with respect to maintenance.

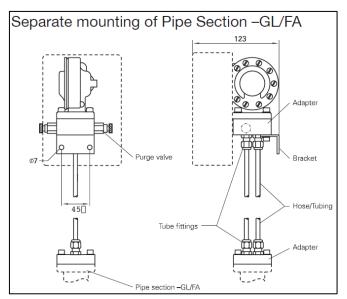

Assemble the Pipe Section adapter to the Pipe Section (see chapter 2.4 on how to separate Control Unit and Pipe Section). If Separate Mounting is ordered together with the Control Unit and Pipe Section, the adapter will be assembled from factory.


Install the Pipe Section according to the instruction in chapter 2.3. In this case you can mount the Pipe Section in any direction, vertically or horizontally, and with the pressure channels pointing upwards, downwards or sideways.

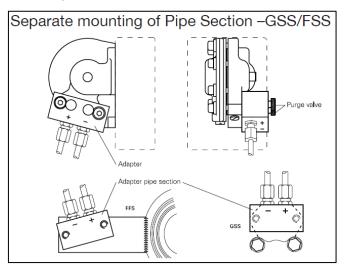

When you fill up the system for the first time with liquid, please make sure that all entrapped air in the tubes/pipes between the Pipe Section and Control Unit is removed. The air can otherwise, as it is a compressible media, cause an inaccurate flow reading.



2.6 Electrical Installation

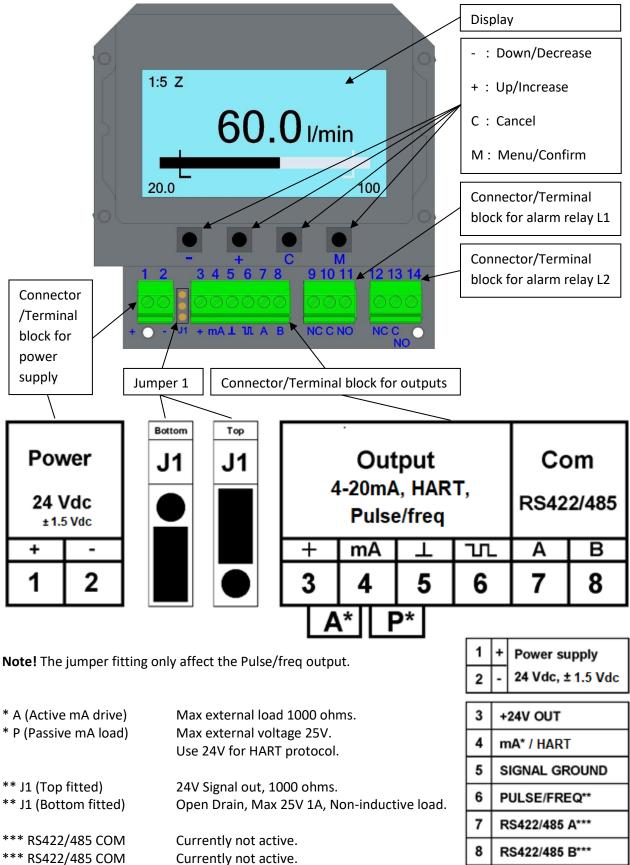

Connect the unit according to the diagram above. Note that it is possible to release the upper part of the connectors to make it easier to connect the cable. Use cable type shielded twisted pair, min 0,2 mm².




All terminal block connections are to be made through the included cable gland (PG9) and please note that you have two alternate mounting options of the cable gland depending on what side you want to enter with the cables. We recommend the entry of the cables to be placed in a downward or sideway direction, to avoid moisture/water to collect in the enclosure.




For HART protocol in point-to-point mode:

Connect 24 Vdc loop to connectors 4 (positive) and 5 (negative). The example below illustrates how to connect a HART modem <u>with</u> internal resistance and power supply.

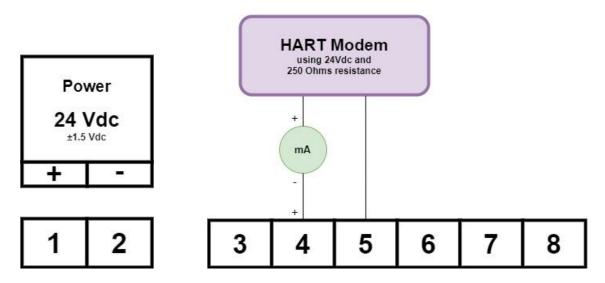


This next example shows how to connect a HART master <u>without</u> internal resistance and power supply.

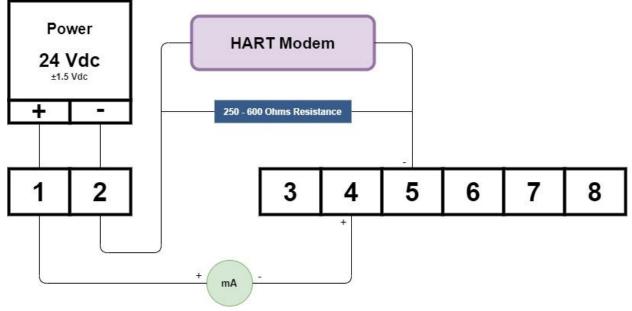



For HART protocol in Multidrop mode:

If Multidrop is to be used, set the "HART Multidrop" option in the settings menu to "ON". Then make sure that the serial number is entered in the factory menu (see 3.1.7), this value is used to create the HART address. The diagram below shows how a Multidrop network can be connected.

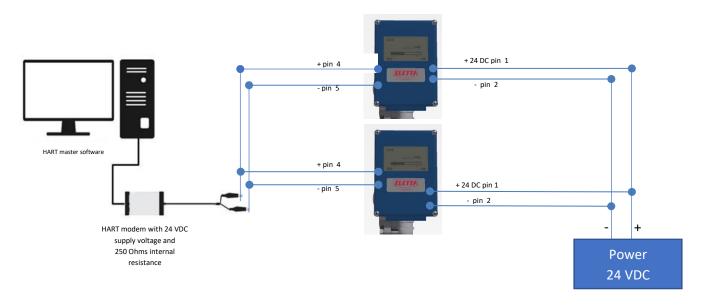

2.6.1 HART Protocol Specification

HART Revision	5
Supported Commands	0, 1, 2, 3, 6, 7, 8, 11, 12, 13, 14, 15, 16, 17, 18, 19
Multidrop	Supported, use the "HART Multidrop" setting in the settings menu to lock the loop current to 4 mA
Default Device Tag	"ELETTA D"
Burst mode	Not supported
Default Polling Address	0

2.6.3 HART Identifying Device

The D-Series uses "0" as the default polling address, this can be used with command 0 to gather the detailed addressing information from the device.



2.6.2 Zero based / Non-Zero based Calibration


The analogue 4-20 mA output signal is pre-calibrated in our flow rig to give you a zero-based signal. This means that you will get a fixed 4 mA reading when there is no flow and up to the minimum measurable flow reading possible i.e. the min of the flow range determined by the Orifice Plate. When the flow hits the min measurable flow, the signal will jump to the linear part of the signal.

For example: The D2 Flow Monitor with a turn down of 1:2 in flow will have the output signal showing 4 mA between 0-50% of the maximum flow range and the jump up to 12 mA when the flow hits 50% of the possible flow range. Between 50-100% of the flow range, you will get a linear output which goes from 12-20 mA. The D5 Flow Monitor that has a turn down of 1:5, will then go from 7,2 mA to 20 mA within the possible flow range (20% - 100% flow).

The frequency signal follows the same pattern as the mA signal. A D2 Flow Monitor goes from 600 - 1000Hz within the possible flow range of the Monitor and the D5 gives you 360 - 1000Hz respectively.

Similarly, the HART "Percent of Range" variable also follows the same pattern as the mA signal.

A non-zero based output signal can be ordered as an option, see figure below.

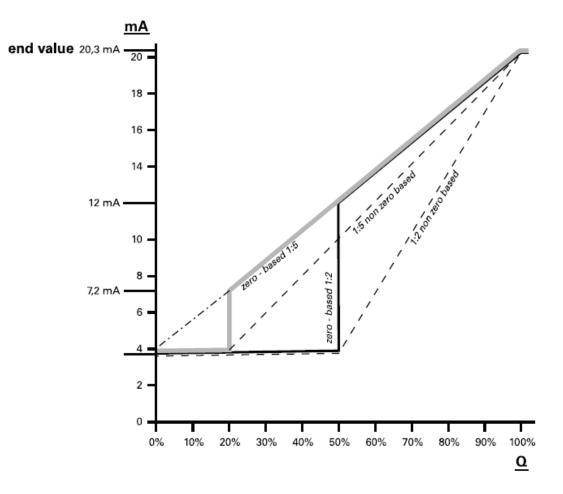



3 Operation


3.1 Display Settings

To change any information on the display, press the button "*M*" and hold for 2 sec. to reach the "*Main menu*".


Note!


No changes you make in the "*Main menu*" except Alarm and Simulation will have an effect on the flow meter function; it's only a change of the displayed information.

3.1.1 Overview

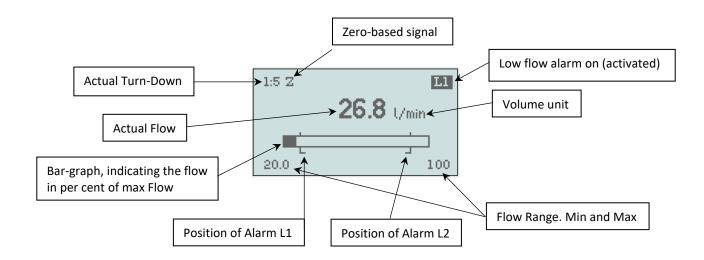

When you connect the power supply, the display lightens up, "Low flow" and "L1" will flash (if you don't have any flow in process pipe).

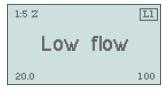

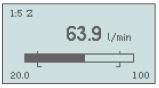

1:5 2 High flow
20.0 100

The flow value shows constantly as long as the flow is within the flow range.

Within 2% below Q min and above Q max, the value will flash before it goes over to show "Low flow" or "High flow"



3.1.2 Language

Main menu	
<u>Langua ge:</u> English	
Settings	
Options	
Simulation	
linfo	
Return	

Main r	
Langua ge:	English
Settings	
Options	
Simulation	
Info	
Beturn	

Scroll in the menu up and down with the buttons + or -. When the text is highlighted (black), it means that you can change the parameters.

To change "Language"; press once more on the "M" button, to move to the right and change language with the buttons "+" or "-".

You can choose between:

English, French, German, Swedish, Spanish, or Chinese.

Confirm the choice with *"M" button.*

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

3.1.3 Settings

Main menu		
Langua ge:	English	
Settings		
Options		
Simulation		
Info		
Return		

Settings HART Multidrop: OFF @max: 100 @min: 20,0 @unit: 1/min Output Alarm

HART Multidrop

Γ	Settings		
L	HART Multidrop	: OFF	
L	Q max:	100	
L	Q min:	20,0	
L	Q unit:	- Umin	
1	Output		
	Alarm		

Scroll down to "Settings" with the "-" button, press the "M" once.

When there is only a frame around the word, you can't change anything as this is only an information field. In the example to the left you can see the actual flow range, Q max and Q min

HART Multidrop mode restricts the output current to 4mA, for use when multiple HART instruments are connected to a singular signal loop. To activate HART Multidrop mode; when "HART Multidrop" is highlighted press "*M*" to move to the right.

Settings		
HART Multidrop	: 0N	
Q max:	100	
Q min:	20,0	
Q unit:	1/min	
Output		
Alarm		

Volume unit

Settings	
HART Multidrop:	OFF
Q max:	100
Q min:	_20,0
<u>Q unit:</u>	1/min
Output	· ·
Alarm	



Use "+ or -" to set "ON" or "OFF" and confirm with "M". HART Multidrop mode will start or stop in the same time you confirm. Press "C" 2 sec. to go back to operating view.

Scroll down to "*Q unit*" with the "-" button and press "*M*", to move to the right and now you can change the displayed units with "+/-" and choose between:

% (of Q max), I/s, I/min, I/h, m³/min, m³/h, USGpm, CFM, CFH.


Confirm the choice with "M"

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

Note! For these changes you don't need to change the orifice, all figures will be recalculated to the displayed unit.



Output

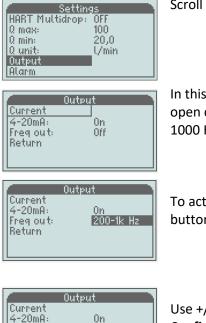

Scroll down to "Output" with the "-" button and press the "M" button.

In this menu you can activate the frequency output. The output is an open collector type, max 24 VDC/100mA. It gives a frequency of 200 to 1000 Hz or pulse.

To activate the output, scroll down to "Freq out" and press the "M" button.

Output	
Current 4-20mA: Freq out: Return	On Pulse

Use +/- to change to "200-1k Hz" or "pulse" Confirm the choice with the "M" button

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the *"C"* button takes you back directly to the operating mode.

Alarm



Alarm	
Q max:	100
Q min:	20.0
Q unit:	Vmin
<u>L1 trig:</u>	Falling
L2 trig:	Rising
L1:	30.0

 Alarm

 Q max:
 100


 Q min:
 20.0

 Q unit:
 L/min

 L1 trig:
 Falling

 L2 trig:
 Falling

 L1:
 30.0

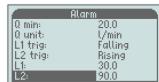

Γ	Alarm	
	2 min:	20.0
) unit:	U/min
	.1 trig:	Falling
III.	.2 trig: 👘	Rising
III.	_1:	30,0
ΙL	_2:	<u> </u>

To change the alarm settings, scroll down with the "-" button to "Alarm" and press the "M" button

Scroll down with the "-" button to L1 trig or L2 trig and press the "*M*" button to set L1 or L2 to falling or rising. L1 is set to falling and L2 is set to rising by default from the factory.

L1 and L2 can both be set to falling/falling or rising/rising.

Scroll down with the "-" button to L1 or L2 and press the "M" button and the input box will light up.

To set the value of the alarm, you change the figure by figure with "+/-" and confirm with "M". Next figure will be highlighted and you repeat until you get your desired value.

Note! It is not possible to set the alarm outside the flow range (Q min/Q max) Also the hysteresis effects on the alarm settings. L1 cannot be set higher than Q max - "Hyst1", and L2 can't be set lower than Q min + "Hyst2".



Hysteresis

Alarm	
L1 trig:	Falling
L2 trig:	Rising
lilli:	30.0
L2:	90.0
Hyst1:	2.5 %
Hyst2:	2.5 %

Alarm	
Rising	
30.0	
90.0 2.5 %	
2.5 %	
2.3 %	


The hysteresis is necessary to avoid the alarm to ripple (go on and off) when the flow is close to the set point.

The hysteresis is changeable separate for each alarm between 2.5, 5 and 10% (of Q max).


To change the hysteresis, you scroll to that value you want to change and then press the "M" button so the value highlights and then use "+/-" to change and confirm with the "M" button.

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

Pulse

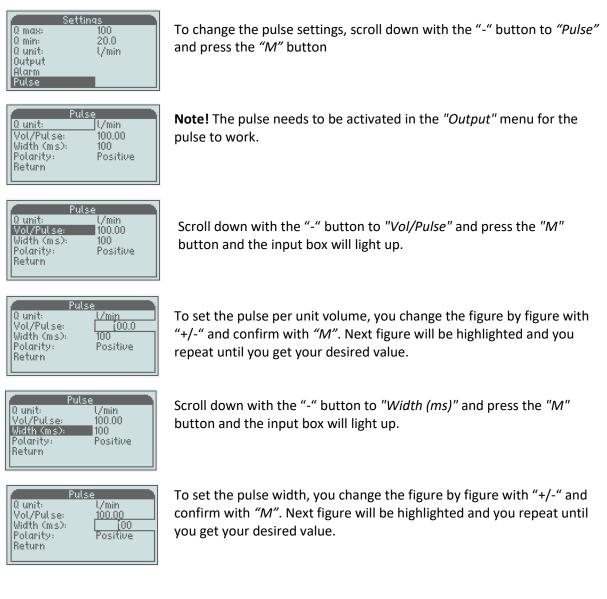



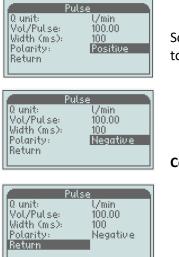

Scroll down with the "-" button to "*Polarity*" and press the "*M*" button to set the polarity to positive or negative.


Confirm the choice with "M" button.


To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

3.1.4 Options

Main menu	
Langua ge:	English
Settings	_
Options Simulation	_
Info	
Return	

Totalizer

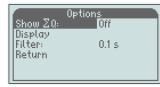

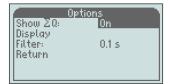



Scroll down to "*Options*" and press "*M*" Here you can find the Totalizer, Display orientation and the Low pass filter.

To activate the totalizer; when "Show ΣQ " is highlighted press "M" to move to the right.

Use "+ or -" to set "On" and confirm with "M". The totalizer will start in the same time you confirm "On". Press "C" 2 sec. to go back to operating view.

The value of the totalizer is the same as the displayed unit, so if you have l/min, l/s or l/h, the unit is liters, and if you have m^3/min , m^3/h the totalized value will be in m^3 .

If you have the displayed unit in "%", the totalizer will not work

The totalizer works as long as the flow is within the flow range. If the flow should go outside the range or there is a power failure, the totalizer goes back to "*Off*" and also disappear from the display. If you want to go back to totalizing mode, you need to reactivate it.

It is also possible to restart the counter by press "-" in the "Operating mode".

Note! The end value for the totalizer is 99999, when this value is reached the counter stops.




Display





Depending on the mounting orientation of the Flow meter, the display can be rotated in 4 different angles, 0°, 90°, 180° and 270°.

To change the orientation, scroll down to "*Display*" and press "M" and when "*Rotate*" is highlighted press "M" to move to the right. Use "+" or "-" to rotate to the angle you want, and confirm with "M".

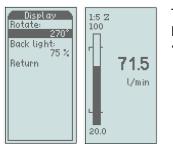

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

Back light

Display	
Rotate:	0*
Back light:	75 %
Return	

The backlight can be changed in 5 different levels, *Off, 25, 50, 75* and 100%

To change it, press "*M*" when "*Back light*" is highlighted and use "+" or "-" to set the desired value. Confirm with "*M*".

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

Filter




This filter will slow down the response time for the output signal and the displayed flow value.

It can be necessary to use this function if you are facing problems in your pipe system with pressure chocks or variations in the flow, giving the display and the output signal an instable value.

The filter can be set between 0 and 26 seconds, where level 0,1 sec is factory default setting.

Note! Don't set the filter higher than necessary as this will have an effect on detecting "true" changes in the flow.

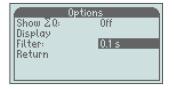

To change the filter value, scroll down in the "*Options*" menu until "*Filter*" will be highlighted. Then press "*M*" and the input box will light up.

To set the value you can change figure by figure with "+/-" if necessary and you confirm with "M". Next figure will be highlighted and you repeat until you get the desired value and then confirm with the "M" button

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.



3.1.5 Simulation

🔨 🛛 Main menu	
Langua ge: Setting s Options Simulation Info Return	English

This function gives you the possibility to create and simulate a real mAsignal from the unit even if you don't have any flow. For example, you want to check other instruments or functions in your system. In this case you can simulate a desired flow or mA-signal from the unit. The simulation mode also allows for the testing of HART functionality, as HART protocol will transmit the simulated values. Note! It's only possible to simulate the mA- and HART-signal, not the

frequency output

Warning!!!

Before using this function, be sure that there is no flow in the system, as this simulation will disconnect the real signal and then disturb receiving instruments.



"Simulation" will be highlighted and press the "M" button. Scroll down to "Q sim" or "mA sim" and press the "M" button, and the input box will light up. To set your desired value you change figure by figure with "+/-" and

To activate the simulation, scroll down in the "Main menu" until



	Z
Q: 20.0 l/min (20.0%) mA: 7.2	
Cancel	

confirm with the "M" button. The next figure will be highlighted and

Confirm with the *"M"* button.

you repeat until you get the right value.

Scroll down to "Start" and press the "M" button to start the simulation

The display will flash between black/white during the simulation. To cancel, press the "C" button.

3.1.6 Info

Info	
S/N	000001
MB ID:	255
Version	2.00
HW1	B01
HW2	B01
Tune	Zero

This menu will give you information about the version of software and hardware and also the type of output signal i.e. Zero-based or Non-Zero based.



3.1.7 Factory Default

Warning!! Warning!!

All changes in this menu will have an effect on the function of the flow meter.

This menu is only necessary when you change to a new orifice (another flow range), or want to change the output signal from Zero-based to Non-Zero-based or opposite or make a recalibration of meter. All other configurations will be made in the "Main menu"

From the operating mode you reach the "Factory default" menu by holding the buttons -, +, and C simultaneously and keep them pressed for 2 sec until the menu lights up.

Changing turn down

Factor;	y default 💦 🍸
T/D: S/N:	1:5
Q unit:	Úmin
Q max:	100
mA signial: Calibrate	Zero

WARNING! Calibration invalid

once TD is changed.

Proceed?

Cancel Yes

T/D: show you the actual flow turn down, in this case 1:5 (Q min is five times less than Q max).

Warning!!!

If you change turn down you need to change both the orifice plate and springs within the diaphragm housing, you also need to do a recalibration.

<u>Do not</u> change turn down without consulting with the Eletta factory first.

Change flow range for a new orifice

Factor	y default
T/D:	1:5
S/N:	1
<u>Q unit:</u>	L/min
Q max:	100
mA signal:	Zero
Calibrate	

Factory	/ default
T/D: S/N:	1:5
Q unit:	<u>ĺ/min</u>
Q max: mA signal:	<u>I0100.0</u> Zero
Calibrate	

Output signal

Factory	default
T/D:	1:5
IS/N:	1
Q unit:	U/min
Q max:	100
mA signial:	Zero
Calibrate	

Factory	/ default
T/D:	1:5
S/N:	1
Q unit:	U/min
Q max:	100
mA signal:	Non-Zero
Calibrate	

v orifice Scroll down to "*Q unit*" and press the "M" button to move to the right. Set the right unit for the new orifice by using "-/+", and confirm with the "*M*" button.

I/s, I/min, I/h, m³/min, m³/h, US GPM, CFM, or CFH

Scroll down to "*Q* max" and press the "M" button and the input box will light up. Set the right value according to the new orifice To set the value you change figure by figure with "+/-" if necessary and confirm with the "*M*" button. Then next figure will be highlighted and you repeat until you get the right value.

The output signal can be set in two different ways; "Zero" (zero-based) means that 4-20 mA represent 0-100% of Q max. This is most common and the factory default.

"*Non-Zero*" (non-zero-based) means that 4-20 mA represent the flow range (4 mA = min value of the flow range), see the graph on next page

To change, scroll down to "*mA signal*" and press the "*M*" button to move to the right, and then change by using "-/+" and confirm with the "*M*" button


To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.



3.1.8 Calibrate


Factor:	y default 💦 🌱
T/D:	1:5
IS/N:	1
Q unit:	U/min
Q_max:	100
mA signal:	Zero
Calibrate	

Flow

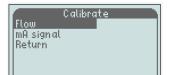


Calibrate Туре Zero No of points: Start Return

Calibrate Zero 9 Туре No of points: Start Return

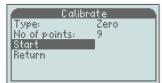


Scroll down to "Start" with "-" and press the "M" button

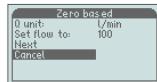

If you have come this far by mistake, you can interrupt the calibration without causing any changes here or you can go on with the calibration by adjusting a stable flow through your reference meter matching the value on the display "Set flow to".


Move with "+" so "Next" will be highlighted and press the "M" button to

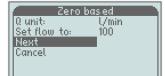

confirm

Please wait

The adjusting of the calibration takes some seconds and during this time you need to keep the flow stable.

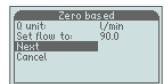

Next step in the calibration lights up and you can adjust to the flow the software ask for and press the "M" button to confirm. The calibration always start on Q max and finish on Q min and split automatically the calibration points proportional over the flow range. Repeat this procedure through the whole calibration.

Note! The Flow Meter is already calibrated from factory and it shall normally not be necessary to recalibrate.

If you still want to do this, you need a master meter so you can adjust to a correct flow.

A new flow calibration will overwrite the old factory calibration and it's not possible to recall it.

Scroll down to "calibrate" and press the "M" button and when "Flow" is highlighted press the "M" button once more.

Chose "Type"; Zero or Non-zero, by pressing the "M" button and use "-/+" to change and confirm with the "*M*" button.

Scroll to "No of points" and choose how many calibration points you want to set. From factory, Turn down 1:5 is calibrated at 9 points and Turn down 1:2 at 6 points (D5 and D2 respectively).

Change the number of points by pressing the "M" button and the input box will light up.


Set the value with "+/-" and confirm with the "M" button.



Calibration OK


Factory	default 🦷
T/D:	1:5
S/N:	1.
Q unit:	U/min
Q max:	100
mA signal:	Zero
Calibrate	



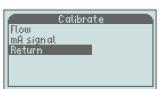

mA-signal

Factory	default
T/D:	1:5
IS/N:	1
l Q'unit:	U/min I
Q max:	100
l ImA signal:	Zero
Calibrate	

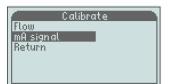





After the last calibration point you get a confirmation whether the calibration was "*OK*" or "*Failed*".

If the calibration was OK, the new calibration will be saved as default in the E²-memory and the display goes back to the factory default menu.

To leave the menu, scroll down to *"Return"* and press the *"M" button*, or hold the *"C"* button during 2 sec.

If the calibration Failed, the display goes back to the "Calibrate menu", and you have to do a new calibration by starting from the beginning of the calibration procedure.

The old calibration is still saved in the E²-memory until a new calibration has passed OK.

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.

The output mA-signal from the meter is also possible to calibrate. It is already done before leaving the factory, but if you, for some reason suspect that it is not correct, there is a possibility to adjust the mA-signal as follows;.

Disconnect the cables from the mA-output (3 and 4 on the terminal block) Connect a calibrated mA-meter (multimeter) to terminal 3 and 4.

Scroll down to "*Calibrate*" and press the "*M*" button.

Scroll to "mA signal" and press the "M" button.

4 mA will be displayed and now you shall compare this value with your multimeter and if necessary you can adjust the signal from the flow meter 10 step up and down with the "-/+" buttons. Each step is 0.05 mA. Adjust as close as possible and confirm with the "M" button.

The program will jump automatically to 20 mA. Repeat the adjusting sequence as above and press the "M" button to confirm.

Reconnect the cables on terminal 3 and 4.

To leave this menu, scroll down to *"Return"* and press *"M"*, or hold *"C"* button during 2 sec. *"Return"* takes you back one step in the menu, the "C" button takes you back directly to the operating mode.




3.2 Change of Flow Direction

At the time of ordering your Flow Monitor you must always specify in which direction the Flow Monitor shall be mounted in i.e. from which side is the flow entering the Pipe Section and in which direction you would like to read the display. If you for some reason have ordered or received a Flow Monitor with the wrong flow direction, or if changes have been made in your piping system and you need to change the flow direction, it is possible to do this in the field.

GL- and FA-models are delivered with a flow direction selector that can be used for both directions. To change the direction, loosen the four (4) hexagon screws which hold the diaphragm housing to the Pipe Section. Remove the Control Unit and you will see the flow direction selector. Place the flow direction selector in the configuration for your system. There is a green marking indicating the flow direction.

Also remember to turn the red arrow mounted on the Pipe Section (-GL and –FA models), to align with the new flow direction.

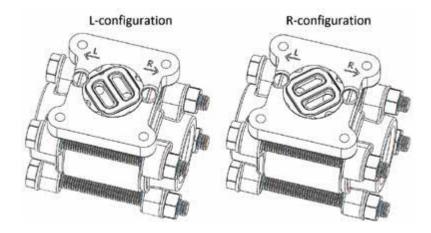

GSS/FSS models does not contain a flow direction selector. The flow direction is an integrated part of the Pipe Section, this means that you need to order a completely new Pipe Section in order to change the flow direction.

3.3 Change of Flow Range

The Eletta Flow Monitors features an orifice design that does not require recalibration after exchanging the orifice plate. This can be used in the field for easy change of flow ranges. The orifice plate inside the Pipe Section is the only part that has to be changed.

You can use any flow range and orifice plate that suits your application, as long as the flow falls within the limits of the range for the Flow Meter.

In each case of changing the orifice plate in-field, we kindly ask you to first contact your distributor or Eletta for advice about the correct orifice plate. The properties of each orifice plate are carefully calculated and designed to match the specific conditions of your installation.



For threaded model –GL

Untighten the bolts that hold the Pipe Section between the flanges in the piping (do not remove the threaded parts from the piping). Remove only the number of bolts necessary to pull the Monitor from the piping, normally it takes only one bolt from the highest position, to get the Monitor out. Take out of the spacer that holds the orifice plate. Change the orifice plate to the new ordered orifice plate and remember that you can install it in any direction. Reinstall the spacer that holds the orifice in place inside the Pipe Section. Install the Monitor in the piping system again and tighten bolts firmly to avoid leakage.



For threaded model –GSS

In this model, there is no loose replaceable orifice plate and therefore it is necessary to change the complete orifice section with holder to achieve a new flow range.

Please follow the above instructions for the –GL model for dismounting the whole orifice plate with holder. Remove the Control Unit from the old Pipe Section (orifice section) and install this to the new Pipe Section. Remount the Flow Monitor into the piping system again and tighten the bolts firmly.





For flanged model FA-

Follow the procedure above to loosen the pipe section from the counter flanges in the piping system, but note that the spacers are held in place with two screws, which has to be untightened before removal



For flanged model FSS-

In this model, there is no loose replaceable orifice plate and therefore it is necessary to change the complete Pipe Section to achieve a new flow range. Follow the procedure above to loosen the Pipe Section from the counter flanges in the piping system. Remove the Control Unit from the old Pipe Section (orifice section) and install this to the new Pipe Section. Remount the Flow Monitor into the piping system again and tighten the bolts firmly. Always check that no gaskets will interfere, by misaligning, with flow when installing the Flow Monitor.



Change type plate

When you change the orifice plate in order to get a new flow range, it is necessary to change the type plate to a plate with the new range marked. This type plate comes together with the orifice plate when you order your new orifice.

Change displayed flow range

It is also important to change the displayed flow range in the digital display in order to get the correct displayed flow. This is done in factory default settings by changing Q-max to the maximum flow of your new orifice. See chapter 3.1.7 "Factory Default".



4 Differential Pressure Measurement

4.1 The Differential Pressure Principle

The function of the Eletta Flow Monitors is based on the proven and dependable differential pressure principle. The instruments use interchangeable sharp-edged orifice plates designed for different measurement ranges.

This is probably one of the oldest and most widely used principles for flow measurements. The principle benefits from simplicity and low cost. In addition, it exists a large amount of research data and experience, which is useful when predicting the behavior of a certain orifice plate.

Inserted into the Pipe Section of the Flow Monitor, the orifice plate constitutes an area restriction that causes a pressure drop after the orifice plate. This pressure drop varies with the flow rate. This means that in the flow direction, we will have one pressure before the orifice plate, and another after the plate. The first pressure will be slightly higher than the second.

The two pressures, before and after the orifice plate, are lead through two separate channels into the Control Unit. In most Eletta Flow Monitors, the differential pressure is sensed and measured by a mechanical mechanism inside the Control Units diaphragm housing. This mechanism transforms the movement into a Flow rate value given through the output signal.

The flow (**Q**) and the differential pressure (ΔP) are proportional to each other. The relation can be approximated by the formula **Q** = $\sqrt{\Delta P}$.

4.2 Pressure Drop

Since the Eletta Flow Meter is based on the Differential Pressure Principle, it is inevitable that a small permanent system pressure drop is caused. The reason is that the orifice plate reduces the flow area inside the pipe, and this will affect the pressure.

In our discussion, it is important to fully understand two types of pressure drops. The first is the actual pressure drop created between the both sides of the orifice plate. The second is the permanent pressure drop that will slightly effect the system.

The **actual pressure drop** is a temporary state that occur over the orifice plate. On the downstream side of the Flow Meter the pressure will try to get back to the same conditions as on the upstream side. Normally, the flow profile will be recovered on the downstream side after approximately 10-15 times the inner diameter of the pipe. However, due to friction losses caused by the orifice plate, the system pressure will not be able to reclaim all the energy (pressure), thus the system pressure will be somewhat less on the downstream side. This is what we call **permanent pressure drop**.

The permanent pressure drop can be calculated approximately by $\Delta Pp = \Delta Pa * (1-B^2)$, where the symbols represent:

ΔPp = Permanent pressure drop

 Δ Pa = Actual pressure drop (see the actual pressure drop formula on the next page)

 $\mathbf{B} = d/D$ Ratio. (d) = the diameter of the orifice bore. (D) = the inner diameter if the pipe.

Normally **\mathbf{B}** is in the interval 0,2-0,7 resulting in a permanent pressure loss of 0.96 Δ Pa-0.51 Δ Pa.



Example:

For the Eletta Flow Monitor D2-GL15 with a flow range of 10-20 l/min, the following example can be used for how to calculate the Δ Pp (permanent pressure drop) at 15 l/min for the said Monitor:

d = 10,2 mm D = 16,0 mm

This gives a **ß** of 10,2/16,00 = 0,6375, which results in $(1-\mathbf{B}^2) = 0,594$

In order to use this **\mathbf{B}** value in the above formula, we need to determine the $\mathbf{\Delta}$ Pa. We can either use the Actual Pressure Drop Graph to get an approximate value, or we can use the actual formula below. If we use the formula to calculate the Δ Pp at 15 l/min we will get:

ΔPa = (15/20)² * 200 mbar = 112,5 mbar

In order to finally get the permanent pressure drop by using the above described formulas, we get $\Delta Pp = \Delta Pa * (1-B^2)$, which translated to values means $\Delta Pp = 112,5 * 0,594 = 66,82$ mbar.


Actual pressure drop formula

For turn down ratio of 1:2 $\Delta Pa = (Q/Qmax)^2 * 2000 mmH_2O (196 mbar)$

For turn down ratio of 1:5 $\Delta Pa = (Q/Qmax)^2 * 5500 mmH_2O (539 mbar)$

Q = The actual flow

Qmax = Maximum flow of the Flow Monitor (according to the orifice plate)

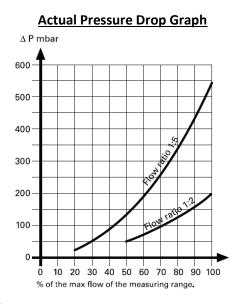

Differential Pressure Range

Turn down 1:2 D2- (± 2% F.S. Reading) Dp-range: 500-2000 mmH₂O

Flow		50%			62,5%			75%			87,5%		100%					
	-2%		+2%	-2%		+2%	-2%		+2%	-2%		+2%	-2%		+2%			
%	49,0	50,0	51,0	61,3	62,5	63,8	73,5	75,0	76,5	85,8	87,5	89,3	98,0	100,0	102,0			
mA (Z)	11,8	12,0	12,2	13,8	14,0	14,2	15,8	16,0	16,2	17,7	18,0	18,3	19,7	20,0	20,3			
mA (NZ)	3,7	4,0	4,3	7,6	8,0	8,4	11,5	12,0	12,5	15,4	16,0	16,6	19,4	20,0	20,6			
mm H2O	480	500	520	750	781	813	1080	1125	1170	1471	1531	1593	1921	2000	2081			
mbar	47	49	51	74	77	80	106	110	115	144	150	156	188	196	204			

Turn down 1:5	D5-	(± 2% F.S. Reading)	Dp-range: 220-5500 mmH ₂ O
---------------	-----	---------------------	---------------------------------------

Flow		20%			40%			60%			80%		100%						
	-2%		+2%	-2%		+2%	-2%		+2%	-2%		+2%	-2%		+2%				
%	19,6	20,0	20,4	39,2	40,0	40,8	58,8	60,0	61,2	78,4	80,0	81,6	98,0	100,0	102,0				
mA (Z)	7,1	7,2	7,3	10,3	10,4	10,5	13,4	13,6	13,8	16,5	16,8	17,1	19,7	20,0	20,3				
mA (NZ)	3,9	4,0	4,1	7,8	8,0	8,2	11,8	12,0	12,2	15,7	16,0	16,3	19,6	20,0	20,4				
mm H2O	211	220	229	845	880	916	1902	1980	2060	3381	3520	3662	5282	5500	5722				
mbar	21	22	22	83	86	90	186	194	202	332	345	359	518	539	561				



5 Trouble Shooting

5.1 Inaccurate Flow Prediction

We would like to stress the fact that all the Eletta Flow Monitors are calibrated and adjusted individually with water in a specially purpose built calibrated flow rig in our factory. This means that we have calibrated the Monitors under reference conditions with enough straight runs before and after the Pipe Section.

If you find that the Flow Monitor does not show the same value as a reference meter on site, this could either be due to that the reference meter has been calibrated under other reference conditions, or that the Flow Monitor now is used under other conditions than the Eletta factory reference conditions.

If your Flow Monitor shows the wrong value or nothing at all

- Is there any output signal, at least 4 mA?
- Does the power supply use the correct voltage?
- Is there any flow in the system pipe?
- Is the Flow Monitor correctly mounted with respect to the flow direction? Check that the arrow on the Pipe Section corresponds to the media flow direction of the system.
- Is the flow sufficient to generate a differential pressure? The flow Monitor is designed for a minimum flow. Check the flow range.
- Do you have the correct orifice plate for the application? Check the product label
- If you use "tube fittings" when connecting the system pipes to the Pipe Section, make sure that they do not have inside diameters that are too small.
- Verify that you are using the correct inner diameter and enough straight runs up-stream and downstream of the pipe section.

If you find process liquid/gas coming out of the Control Unit

The most likely problem is that the diaphragm inside the diaphragm housing is broken and needs replacement. A new diaphragm is available to buy as a spare part. Contact the Eletta factory if there is any uncertainty on how to change the diaphragm. If there is liquid inside the blue housing, the problem is probably a broken lever that goes from the diaphragm housing into the blue housing. In this case you probably need to send the complete Control Unit back for repair since changing of the lever requires a recalibration of the unit which can be troublesome to do at site. It is also likely that the circuit boards inside the Control Unit has been damaged by the leaking liquid.

You can always contact the Eletta customer support for help and recommendations if you have a problem with any of our products, we are happy to help you in the best way possible!


5.2 Spares

We are proud to say that our Flow Monitors are well known for their long lifetime and robust construction but inevitable, it is sometimes needed to order spare parts. We refer to chapter 6 where you can find BOM drawings showing all components included in the Flow Monitor. If you have installed the Eletta D-series Flow Monitor in a very critical application, we recommend you to have a complete identically pre-calibrated Control Unit in stock, see chapter 2.4 on how to install a new Control Unit on your existing Pipe Section. The Pipe Section consist of no moving parts and all copper alloy/SS material and it is very rare with a breakdown of this part.



6 Spare Parts

6.1 BOM Drawing D-GL/FA

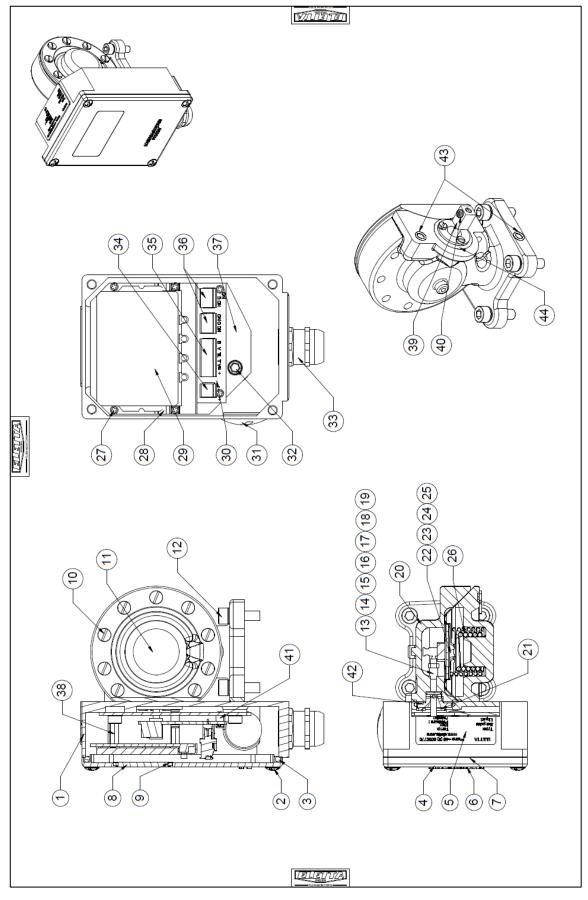


ſ			_																																
	Remark	Nickel plated	Nickel plated																																
	Art no	40-90080	40-93033	40-94001	40-94006																														
	Dim.	2,5x5x4		5,1x1,8	19,2x3																														
	Material	CW614N	CW614N	NBR	NBR																														
	Name of item	Spacer	Thrust flange	O-ring	0-ring																														
 -	Qty	3	+																																
	Pos (41	42	43 2	44 1																														
	Remark Pos (42	43		Milmar T.C. 25 my Dull silver	Calendered white gloss vinyl		אפון מתוונסואב לעד באמוון לפון ותהחנו	Forging			Nickel plated	Nickel plated	Fluorcarbon rubber (FPM) Nitrila rubhar NAR)	Synthetic rubber (EPDM)		Forging			Fluoroarbon rubber (FPM) Nitrile rubber (HNBR) Synthetic rubber (EPDN)		D2: Turndown 1-2 D5: Turndown 1-5						Plastic	AWG 28-10 10UV rated	AWG 28-10 100V rated AWG 28-16 160V rated		Nickel plated	Nickel plated	
	Pos	Polyester powder coating 41	42	Synthetic rubber 43	44	40-93073 + 40-93198 Milmar T.C. 25 my Dull silver	_	40-93196			40-80027	40-83032	40-93035 Nickel plated				40-80052		40-90007	40-83015		40-83018	D2: 40-91009 D2: Turndown 1-2 D5: 40-91069 D5: Turndown 1-5	40-90005	40-83197	40-81108	40-01049		91088		40-01110-2 AWG 28-10 100V rated				
	Remark	40-83001 Polyester powder coating 41	40-90022 42	Synthetic rubber 43	3M TT2 PS PET 50-350E/46-85DWG		_			40-93008	M6x22 40-90027	40-83032		40-83034	0-83047-1 40-03047		M4x0.5 40-90052	40-93007	M3x10 40-90007	40-83015	83011-1 0-83011 -83011-1	40-83018		M2,5x8 40-80005	40-83197	40-91108	PG16 40-91049	40-90023							40-90005
	Art no Remark Pos	00 40-93001 Polyester powder coating 41	M5x16 40-90022 42	0 0,3/m 40-64020 Synthetic rubber 43	3M TT2 PS PET 50-350E/46-85DWG	40-93073 + 40-93198	_	40-93196	40-80024 40-80024	40-8308		1.4305 40-93032	40-93035	40-83034	40-93037 Standard: FPM: 40-93047-1 Ontional: HNRP: 40-03047	Optional: EPDM: 40-93047-2 40-03038	M4x0.5	40-83007	M3x10	1.4305 40-83015 40-83015 40-83015	PDM 2011-1 21andard: FPM: 40-93011-1 Cptional: ENER: 40-93011-1 Optional: EPDM: 40-93011-1	1.4436 40-83018		M2,5x8	1.4301 40-93197 40-03197	40-91108		1 M5x16 40-90023	PG9 40-81087 and 40-91088	40-81110		40-93195	40-90083	40-93146	M2 5v8 40-00005
	Dim. Art no Remark Pos	EN-AB 48000 40-83001 Polyester powder coating 41	X 1.4301 M5x16 40-90022 42	EPDM 70 IRHD 0,37m 40-94020 Synthetic rubber 43	40-93005 3M TT2 PS PET 50-350E46-65DWG	logo Silverpolyester 40-93073 + 40-93198	No art nr	PMMA 40-93198	M5x20 40-80024 FBR M5 40-80043	over CW602N 40-93008	M6x22		40-93035	40-93034	CP 2x8 40-93037 Standard: FPM: 40-93047-1 Ontinual: HNRP: 40-03047	Optional: EPDM: 40-83047-2	1.4301 M4x0.5	Nousing CW802N 40-93007	1.4301 M3x10	ft 1.4305			D2: 40-91009 D5: 40-91069	1.4301 M2.5x8	te 1.4301	PCB Power with terminals 40-81108	PA PG18	1.4301 M5x16 40-90023	bon PA PG9 40-91087 and 40-91088	PA 40-81110	40-01110-2	14301 40-83195	18 CW614N 40-90083	CW614N 40-93146	1 4301 M2 5x8 40-90005
	Material Dim. Art no Remark Pos	EN-AB 48000 40-83001 Polyester powder coating 41	Sorew MKFX 1.4301 M6x16 40-80022 42	Gasket EFDM 70 IRHD 0,3/m 40-94020 Synthetic rubber 43	EN-NB 4000 4-63001-5 Frolyssee power coang 44 Silverpolyester 40-83065 3M TT2 PS PET 50-350E40-65DWG 44	Silverpolyester 40-93073 + 40-93198	Silverpolyester No art nr	PMMA 40-93198	Oceaning wincow epuin cell Horavi 2 Screw MCS with 1.4301 M6x20 40-00024 Monta 1.4301 FBB M5 40-00043	CW602N 40-83008	1.4301 M6x22	1.4305	CW614N 40-93035	CW614N 40-93034	14301 CP 2x8 40-e3037 FPMI-INER/FEDM Standard: FPMI-63047-1	Dobional: EPDM: 40-83047-2	1 Nut 1.4301 M4x0.5	1 Diaphragm housing CW802N 40-83007	3 Screw MCS 1.4301 M3x10	1.4305	Investmanter Invoid 1 Diaphnagm (HNBR std) FPM/HNBR/EPDM Standard: FFM. 40-03011-1 1 Diaphnagm (HNBR std) FPM/HNBR/EPDM Optional: EPDM: 40-03011-1	1.4436	1.4436 D2: 40-91009 D5: 40-91069	11 Screw MRX 1.4301 M2,5x8	1.4301	1 PCB Power with terminals	PA PG18	Screw MC6S with washer 1.4301 M5x18 40-90023	Cable gland with reduction PA PG9 40-91087 and 40-91088	1 I erminal socket 2X PA 40-81110	PA 40-91110-2 PA 40-91110-2	Mounting plate D 1.4301 40-03165	CW614N 40-90083	Lever end piece A/R CW014N 40-83148	1 Screw MRX 14301 M2.5k8 40-90005

ELETTA





6.2 BOM Drawing D-GSS/FSS

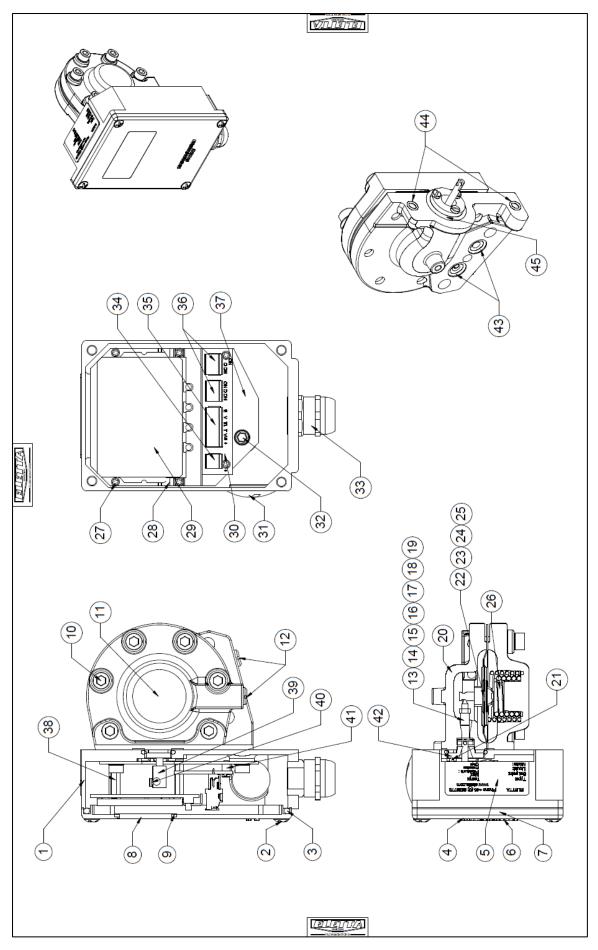


																			7	Ú.	זרנ	7																
	Remark	Nickel plated	Nickel plated																																			
	Art no	40-90080	40-93033	Standard: FPM: 40-94003-1 Optional: NBR: 40-94003	Optional: EPDM 40-94003-2	40-94001	40-84000																															
	Dim.	2,5x5x4				0'1X1'0	SX2,81																															
	Material	CW614N	CW614N	FPM/NBR/EPDM	5	XBN XBN	YAN																															
	Name of item	Spacer	Thrust flange	O-ring (fpm std)		O-ring	Bui-O																															
5	s Qty	e	-	2	_	_	-																															
12112100 NOT	Pos	41	42	43	+	 4 ;	6		er													Т				Τ		Т	Τ	Γ								
	Remark	Polyester powder coating		Synthetic rubber Polyester powder coating	3M TT2 PS PET 50-350E/46-65DWG	Milmar T.C. 25 my Dull silver	Calendered white gloss vinyl		self adhesive 304 epdm cell rubber		Precision casted 1.4470 Fluorcarbon rubber (FPM)	Nitrile rubber (NBR) Synthetic rubber (EPDM)		Nickel plated	Nickel plated		Fluorcarbon rubber (FPM) Nitrile rubber (NBR) Synthetic rubber (EPDM)			Precision casted 1.4470			Fluorcarbon rubber (FPM) Nitrile rubber (HNBR) Synthetic rubber (EPDM)		D2: Turndown 1-2 D5: Turndown 1-5						Plastic	AWG 28-16 180V rated	AWG 28-16 160V rated	AWG 28-16 160V rated		Nickel plated	Nickel plated	
	Art no	40-93001	40-90022	40-94020 40-93001-3	40-93065	40-93073 + 40-93198	No art nr	40-93196	40-94073	40-90028 40-90044	40-93010 40-90061 Standard: FPM:40-04001-1	Optional: EPDM 40-94001-2	40-93032-1	40-93035	40-93034	40-93037	Standard: FPM: 40-93047-1 Optional: HNBR: 40-93047 Optional: EPDM: 40-93047-2	40-93038-1	40-90053	40-93009	40-90007 40-03022	40-93022-1	Standard: FPM: 40-93012-1 Optional: HNBR: 40-93012 Optional: EPDM: 40-93012-1	40-93018	D2: 40-91009 D5: 40-91089	40-90005	40-93197	40-91106	40-91049	40-90023	40-91087 and 40-91088	40-91110	40-91110-2	40-91110-1	40-93195	40-90083	40-93146	40-90005
	Dim.		M5x16	0,37m						M8x25 For M6		M6				CP 2x8			M4x0.5		M3x10					M2,5x8			PG18	M5x16	PG9							M2,5x8
	Material	EN-AB 46000	1.4301	EPDM 70 IRHD EN-AB 46000	Silverpolyester	Silverpolyester	Silverpolyester	PMMA	epdm cell	1.4301 A4 1.4301	1.4470 254SMO	FPM/NBR/EPDM	1.4305	CW614N	CW614N	1.4301	FPM/HNBR/EPDM	1.4305	1.4436	1.4470	1.4301	1.4539	FPM/HNBR/EPDM	1.4436	1.4436	1.4301	1.4301		PA	1.4301	PA	PA	PA	PA	1.4301	CW814N	CW614N	1.4301
	Name of item	Casing	Screw MKFX	Gasket Cover D	Type plate	Label Eletta + D logo	Label wiring (inside cover)	Display window	Sealing window	Screw MCBS with washer	Diaphragm housing cover Screw with	O-ring (FPM std)	Lever SS	Spacer	Guide washer	Pin	Rubber seal (FPM std)	Thrust ring SS	Nut	Diaphragm housing	Screw MCS Disebrations chaft	Rivet washer	std)	Diaphragm plate	Diaphragm spring	Screw MRX	Display frame fix plate	PCB Power with terminals	Fitting	Screw MC8S with washer	Cable gland with reduction	Terminal socket 2x	Terminal socket x8	Terminal socket x3	Mounting plate D	Spacer DHMM2550018	Lever end piece A/R	Screw MRX
	s Qty	-	+		+	-	-	1	1	8 (5	- 1	-	1	-	- 1	-	-					-	-	1		_	_	2	-		-	2	-	4	-	-
	Pos	-	2	ω 4	~	9	7	•	6	10	-11-	-12-	-13-	14	15	16	-11-	-18-	-19-	-20-	-21-	3	-24-	-25-	-26-	27	8	8 8	31	32	33	8	35	36	37	38	8	40








7 Weight and dimensions


D - GL										
Туре	D	A	,	B		C Im	E	n	Weight ka*	
-GL15 -GL20 -GL25 -GL40	1/2" 3/4" 1" 1 1/2"	75 75 75 85	150 150 150 160		30 30 30 40		80 80 80 90		3,0 3,0 3,0 4,0	
D - FA										
Туре	d mm	D	D mm				dth m		Weight kg*	
-FA15 -FA20 -FA22 -FA40 -FA50 -FA65 -FA80 -FA100 -FA125 -FA150 -FA250 -FA250 -FA300 -FA350 -FA400	16 (1/2") 22 (3/4") 30 (1") 39 (11/4") 43 (11/2") 55 (2") 70 (21/2") 82 (3") 107 (4") 132 (5") 159 (6") 207 (8") 260 (10") 310 (12") 340 (14") 390 (16")	53 63 73 84 94 109 129 144 164 219 274 330 385 445 498	63 154 73 161 84 165 94 177 109 188 129 190 144 197 164 200 194 222 219 233 274 265 330 290 385 320 445 345		4 70 1 70 7 70 2 70 0 70 7 70 7 70 7 70 7 70 2 70 5 70 3 70 0 70 0 70 5 70 3 70 0 70 7 0 7		4,0 4,5 5,0 6,0 7,0 8,0 10,0 11,0 15,0 19,0 21,0 35,0 40,5			
D - GSS	D - GSS									
Туре	D	A mm	1	B mm		C Im	Wid mn		Weight kg*	
-GSS15 -GSS20 -GSS25	1/2" 3/4" 1"	100 100 100		130 130 130	3	5 5 5	53 53 53		3,0 3,0 3,0	
D-FSS										
Туре	d mm	D	,	A		Wid			Weight kg*	
-FSS15 -FSS20 -FSS25 -FSS32 -FSS40 -FSS40 -FSS50 -FSS100 -FSS125 -FSS150 -FSS150 -FSS150 -FSS250 -FSS350 -FSS350 -FSS350 -FSS400	16 (1/2') 22 (3/4') 30 (1') 39 (11/4') 43 (11/2') 55 (2') 70 (21/2') 82 (3') 107 (4') 132 (5') 159 (6') 207 (8') 200 (10') 310 (12') 340 (14') 390 (16')	53 63 73 84 94 109 129 144 164 194 219 274 330 385 445 498	63 17; 73 18; 84 18; 94 19; 109 211 129 220 144 23; 194 25; 219 26; 274 29; 330 320; 385 350; 445 37;		5 15 3 15 5 15 0 15 0 15 8 15 3 15 6 15 3 15 0 15 0 15 0 15 0 15 0 15 0 15 0 15 0 15 0 15 0 15			3,0 3,0 3,0 3,0 3,0 3,5 4,0 4,5 5,0 6,5 9,5 14,5 16,5		
All stai D-SS -	nless steel GSS									
Туре	D	A mm	,	B mm		C Im	Wid mn		Weight kg*	
-GSS15 -GSS20 -GSS25	1/2" 3/4" 1"	110 110 110		149 149 149	1	35 35 35	53 53 53		3,5 3,5 3,5	
D-SS - FSS										
Туре	d mm	D	D mm		A mm		Width mm		Weight kg*	
-FSS15 -FSS20 -FSS25 -FSS40 -FSS65 -FSS65 -FSS80 -FSS100 -FSS125 -FSS150 -FSS200 -FSS250 -FSS250 -FSS250	16 (1/2°) 22 (3/4°) 30 (1°) 39 (11/4°) 43 (11/2°) 55 (2°) 70 (21/2°) 82 (3°) 107 (4°) 132 (5°) 159 (6°) 200 (10°) 310 (12°) 340 (14°)	53 63 73 84 94 109 129 144 164 194 219 274 330 385	53 63 73 84 94 109 129 144 194 219 274 330		179 185 193 195 200 220 230 238 248 263 276 303 330 360 385 415		15 15 15 15 15 15 15 15 15 15 15 15 15 1		3,5 3,5 3,5 3,5 3,5 4,0 4,0 4,0 4,5 5,0 5,0 5,0 5,0 5,0 8,5 10,0 15,0 15,0 17,0	

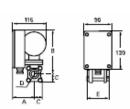


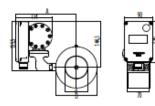

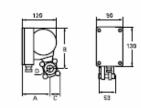

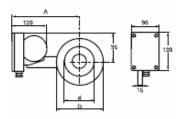

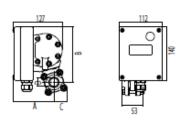

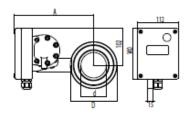



8 Measuring Ranges

The tables below are showing the standard measuring ranges for our Flow Monitors. The tables work as a guideline of what range that is achievable for different Pipe Sections and dimensions. It is possible to order different measuring ranges than indicated in the tables.

D2		
Dim. DN		lit/min
1/2" DN 15	GL, GSS FA, FSS	$\begin{array}{rrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrr$
3/4" DN 20	GL, GSS FA, FSS	$\begin{array}{rrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrr$
1″ DN 25	GL, GSS FA, FSS	8 - 16 10 - 20 12 - 24 16 - 32 24 - 48 36 - 72 40 - 80 50 - 100
1 1/4" DN 32	FA, FSS	20 - 40 28 - 56 40 - 80 60 - 120 80 - 160
1 1/2" DN 40	GL FA, FSS	20 - 40 28 - 56 40 - 80 60 - 120 80 - 160
2″ DN 50	FA, FSS FA, FSS	100 - 200 40 - 80 60 - 120 80 - 160 120 - 240 160 - 320
2 1/2" DN 65	FA, FSS	60 - 120 80 - 160 120 - 240 160 - 320 240 - 480 280 - 560
3″ DN 80	FA, FSS	120 - 240 160 - 320 240 - 480 320 - 640 400 - 800
4" DN 100	FA, FSS	160 - 320 280 - 560 400 - 800 600 - 1200 700 - 1400
5" DN 125	FA, FSS	400 - 800 600 - 1200 800 - 1600 1000 - 2000
6″ DN 150	FA, FSS	600 - 1200 800 - 1600 1200 - 2400 1400 - 2800 1500 - 3000
8" DN 200	FA, FSS	800 - 1600 1200 - 2400 1600 - 3200 2400 - 4800 2500 - 5000
10" DN 250	FA, FSS	1600 - 3200 2000 - 4000 3200 - 6400 4000 - 8000



D5		
Dim. DN		lit/min
1/2″ DN 15	GL, GSS FA, FSS	0,4 - 2 1 - 5 2 - 10 4 - 20 6 - 30 8 - 40
3/4" DN 20	GL, GSS FA, FSS	4 - 20 6 - 30 8 - 40 15 - 75
1" DN25	GL, GSS FA, FSS	6 - 30 12 - 60 16 - 80 24 - 120
1 1/4" DN 32	FA, FSS FA, FSS	30 - 150 8 - 40 20 - 100 40 - 200 50 - 250
1 1/2" DN 40	GL, FA, FSS	8 - 40 20 - 100 40 - 200 60 - 300
2″ DN 50	FA, FSS	20 - 100 40 - 200 70 - 350 100 - 500
2 1/2" DN 65	FA, FSS	20 - 100 50 - 250 100 - 500 160 - 800
3″ DN 80	FA, FSS	40 - 200 80 - 400 160 - 800 240 - 1200
4" DN 100	FA, FSS	80 - 400 160 - 800 250 - 1250 400 - 2000
5″ DN 125	FA, FSS	100 - 500 200 - 1000 400 - 2000 600 - 3000
6″ DN 150	FA, FSS	200 - 1000 400 - 2000 600 - 3000 900 - 4500
8″ DN 200	FA, FSS	400 - 2000 600 - 3000 1000 - 5000 1500 - 7500
10" DN 250	FA, FSS	600 - 3000 1000 - 5000 1600 - 8000 2400 - 12000



Eletta Flow AB P.O. Box 5084 SE-141 05 Kungens Kurva SWEDEN

E-mail info@eletta.com www.eletta.com Phone + 46 8 603 07 70 Switchboard + 46 8 603 07 80 Orders and Inquires